



**TPIS Heated Oxygen Sensor
Part Number 300-162**

1. Disconnect the black wire to the old oxygen sensor and remove it from the manifold.
2. Thread the new sensor into the manifold.
3. Attach the black wire from the new oxygen sensor to signal wire going to the computer.
4. Attach one of the white wires to an engine ground.
5. Attach the remaining white wire to a switched 12 volt power source.

NOTE: The two white wires are for the heating element in the sensor. POLARITY IS NOT IMPORTANT.